




G1160 / G116001 Supaclamp

Doughty Engineering Ltd

IMPORTANT NOTICE

1. Never exceed the Safe Working Load (SWL) show on the front of the clamp.
2. Only use the clamp within its designed parameters (5mm Flat to 50mm tubes) as (figure 2)
3. The SWL is only applicable when the clamp is used in a vertical orientation i.e. on the horizontal flat / tube as (figure 1 & 2)
4. All clamps should be visually inspected before use. In the event of any damage, including cracks, the clamp should be taken out of service and returned to an 'Approved Doughty Service Centre' or Doughty Engineering for inspection.
5. When used in conjunction with other accessories, care must be taken to ensure that the minimum SWL of any component is not exceeded.
6. Use in conjunction with suitable Snap-in fittings.

Figure 1

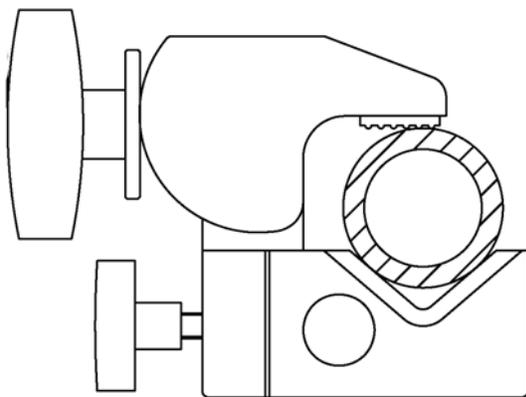

20 kg Vertical SWL



Figure 2



Operating Manual

www.doughty-engineering.co.uk